

Backpack Tent w/Ghillie Cover

Instruction and Safety Manual



Thank You! for purchasing The Ghillie Blind

Be sure to follow these guidelines for using your Product.

READ AND UNDERSTAND ALL INSTRUCTIONS and WARNINGS FIRST.

Any questions or confusion regarding the use of this product contact our Customer Service Department at GhillieSuits.com Inc.™ 1-877-510-0147 before using.

SAFETY MUST BE FIRST PRIORITY WITH USE OF THIS PRODUCT

**Step 1:**

Remove ground stakes and fiber poles from carry case.

**Step 2:**

Remove your Blind from the back pack. Holding one of the 3 ring sets of steel, let the other two pop open. Then unfold Blind and lay it flat on ground.

**Step 3:**

Standing your Blind upright.

**Step 4:**

Open Blind door, insert fiber poles. Use high-wind tie-downs/ground stakes to secure blind.



Secure Fiber Poles at Peak of Roof

FIBER POLE SET UP INTRODUCTIONS

**Step 1:**

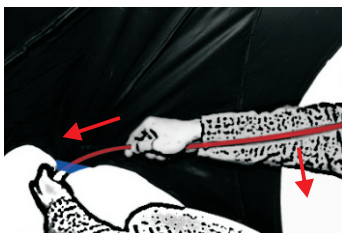 
Connect each section of the pole.

**Step 2:**

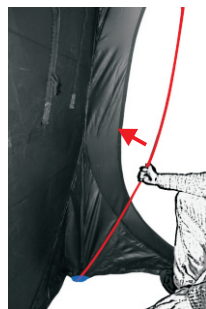 
Insert the first end pole into opposite pocket inside the bottom blind corner.

**Step 3: Insert the second end.**

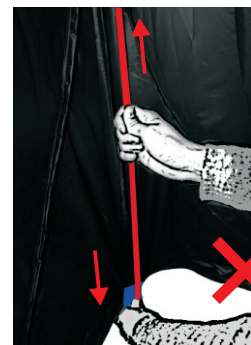 
Hold the fiber pole, stretch the pole bending it towards you.

**Step 4:**

While holding the bent pole, Insert the end into the bottom pocket of the blind corner.

**Step 5:**

Push the fiber pole to the blind corner side.



Do not insert the second end pole into opposite pocket UPRIGHT!

**Step 1:**

Remove your Ghillie Cover from the back pack.

**Step 2:**

Unfold the Ghillie Cover.

**Step 3:**

Take the Ghillie Cover over the Blind.

**Step 4:**

Connect the Ghillie Cover and Blind with velcro.



Entire Ghillie Blind Show

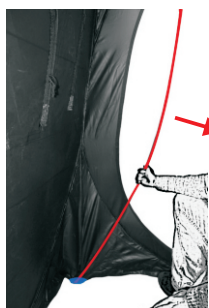 
TAKE-DOWN INSTRUCTIONS

! Tip: Be sure to remove all native brush, dirt and debris

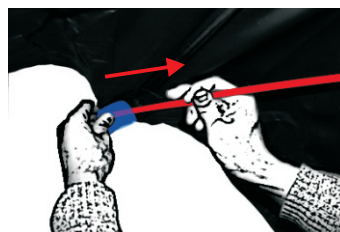 
BEFORE beginning take down. Remove Ground Stakes.

**Step 1:**

Remove the Ghillie Cover from the Blind, and all ground stakes, tie-downs.

**Step 2:**

Stretch the pole bending it towards you, then pull out the end from the pocket of the blind corner.

**Step 3:**

Lay Blind on it's side, and fold each side over.

**Step 3:**

Roll Blind out away from your body, it will begin to create a "U" shape, remove one hand from the steel and ROTATE 180°, (Right hand counter clock wise or left hand clockwise). You can also rotate both hands.

**Step 4:**

Continue to ROLL TOP of BLIND over, While overlapping TWO STEEL BANDS closest to your body. Tuck TOP SECTION UNDER. so it overlaps onto BOTTOM HALF of BLIND.

**Step 5:**

You will feel less tension now. Simply DROP RINGS TO GROUND.

PLEASE NOTE: Images used are for demonstration purposes only and may not depict the actual product.

Page 3

PARTS LIST

- 1 Ghillie Cover
- 1 Blind(66" Square × 77" Tall)
- 2 Sets Fiber Poles
- 16 Pairs Velcro
- Ground Stakes/High-Wind Tie-Downs

REPLACEMENT FIBER POLES

If your fiber poles would ever happen to fail or become lost you can order replacements from GhillieSuits.com Inc.™ or contract our Customer Service Department.

**STORAGE AND TIPS**

- Store Blind in a cool dry place - free native brush, dirt and any debris
- Never store Blind wet or damp
- Avoid leaving Blind outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.
- To stop any leakage, use seam sealer on all seams and silicon spray on seams/sidewalls.
- To store your TSC windows and/or Shoot-Through Mesh (if included with Blind or purchased separately), avoid wrinkles and creases that could significantly reduce visibility
- To aid in folding blind be sure the window curtain is all the way up and secured

CPAI-84 WARNING

! WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. This tent is made of flame-resistant fabric. It is not fireproof. The fabric will burn if left in continuous contact with a flame source. DO NOT use candles, matches or open flames of any kind in or near a tent; DO NOT cook inside a tent; DO NOT smoke in a tent; DO NOT store flammable liquids inside a tent; build campfires downwind and several meters away from a tent and be sure to fully extinguish campfires before leaving a campsite or before retiring for the night; exercise EXTREME caution when using fuel-powered lanterns or heaters inside a tent and use battery operated lanterns whenever possible; DO NOT refuel lamps, heaters or stoves inside a tent; extinguish or turn off all lanterns before going to sleep. The application of any foreign substance to tent fabric may render flame resistant properties ineffective.

THINK SAFETY !

- NEVER USE A HEATER IN YOUR GHILLIE BLIND—UNVENTED FUMES COULD CAUSE SICKNESS OR HEATH
- NEVER EXPOSE YOUR BLIND TO ANY OPEN FLAME. THIS PRODUCT **IS NOT FIREPROOF**
- NEVER SHOOT THROUGH THE TSC WINDOWS WITH A FIREARM SPARKS OR FLAME FROM THE MUZZLE COULD IGNITE THE MATERIAL
- NEVER SHOOT EXPANDABLE BROADHEADS THROUGH THE TSC WINDOWS - THE MESH MAY CAUSE PREMATURE OPENING OF THE BLADES. USE FIXED BLADE BROADHEADS ONLY
- FOR BEST ARROW FLIGHT THRU TSC AND SHOOT-THROUGH MESH WINDOWS, ALIGN BROADHEAD BLADES WITH FLETCHING
- NEVER ALLOW CHILDREN TO PLAY WITH THIS PRODUCT WITHOUT ADULT SUPERVISION
- NEVER ALLOW MATERIAL TO COVER YOUR FACE. IT CAN CAUSE SUFFOCATION AND DEATH
- NEVER ALLOW ANYONE TO USE LIGHTED CANDLES, MATCHES OR OTHER SOURCES OF FIRE NEAR THIS PRODUCT

! CHOKING HAZARD - MAGNETS ENCLOSED. Keep Small Parts Away From Children. Do Not Ingest or Inhale Magnets. Attraction of Magnets in the Body May Cause Serious Injury and Require Immediate Medical Care.

• UV (ULTRAVIOLET LIGHT) WARNING:

Ultraviolet light breaks down lightweight fabric fibers (and almost any synthetic material). The material will fade (discolor), lose strength and eventually disintegrate if left in prolonged sunlight. To extend the life of your GhillieSuits.com Inc.™ product avoid leaving it out in direct sunlight. Set up your portable ground blind or accessory in a shady spot whenever possible to extend the product life.